

Magna Stop™ Install Guide

PARTS INCLUDED
(Shown In Black)



1


Place *Magna Cap* (with adhesive putty inside) onto tip of doorstop.



Magna Stop is designed to fit all doorstops—even ones missing rubber tips.

2


Place *Magna Plate* onto the *Magna Cap* and remove backing. Make sure *Magna Plate* is centered on *Magna Cap*.

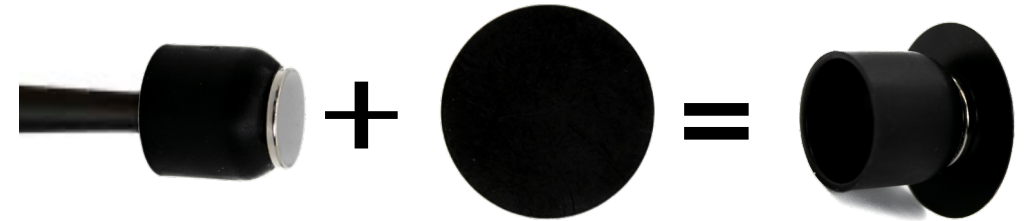

The painted side of the *Magna Plate* should rest on the magnet of the *Magna Cap*. The adhesive side of the *Magna Plate* should face the door.

3

Immediately, open door fully until it rests against doorstop. Place an object against door to ensure contact with *Magna Stop* and leave door against doorstop for 5 minutes allowing adhesive putty to set. *Magna Stop* will adjust itself to the angle of your door.

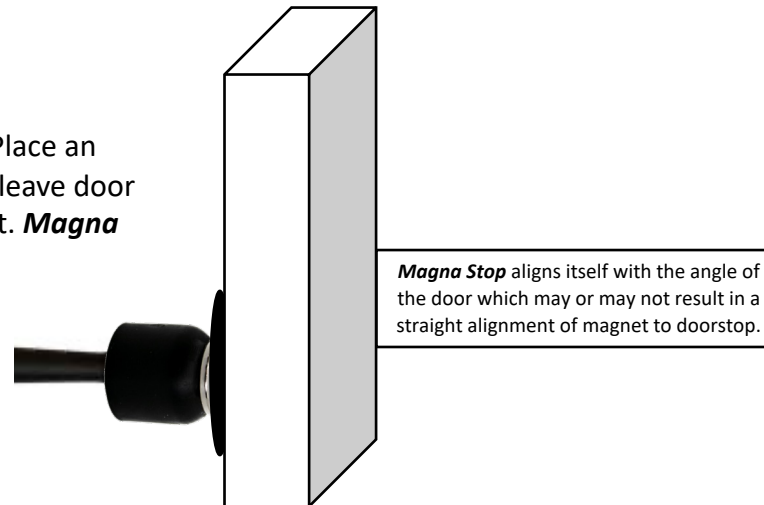

Install Video
https://youtu.be/9mWibHV_D-4